




# Replacing IBM ThinkPad 560z Speaker

Written By: Derek Driscoll

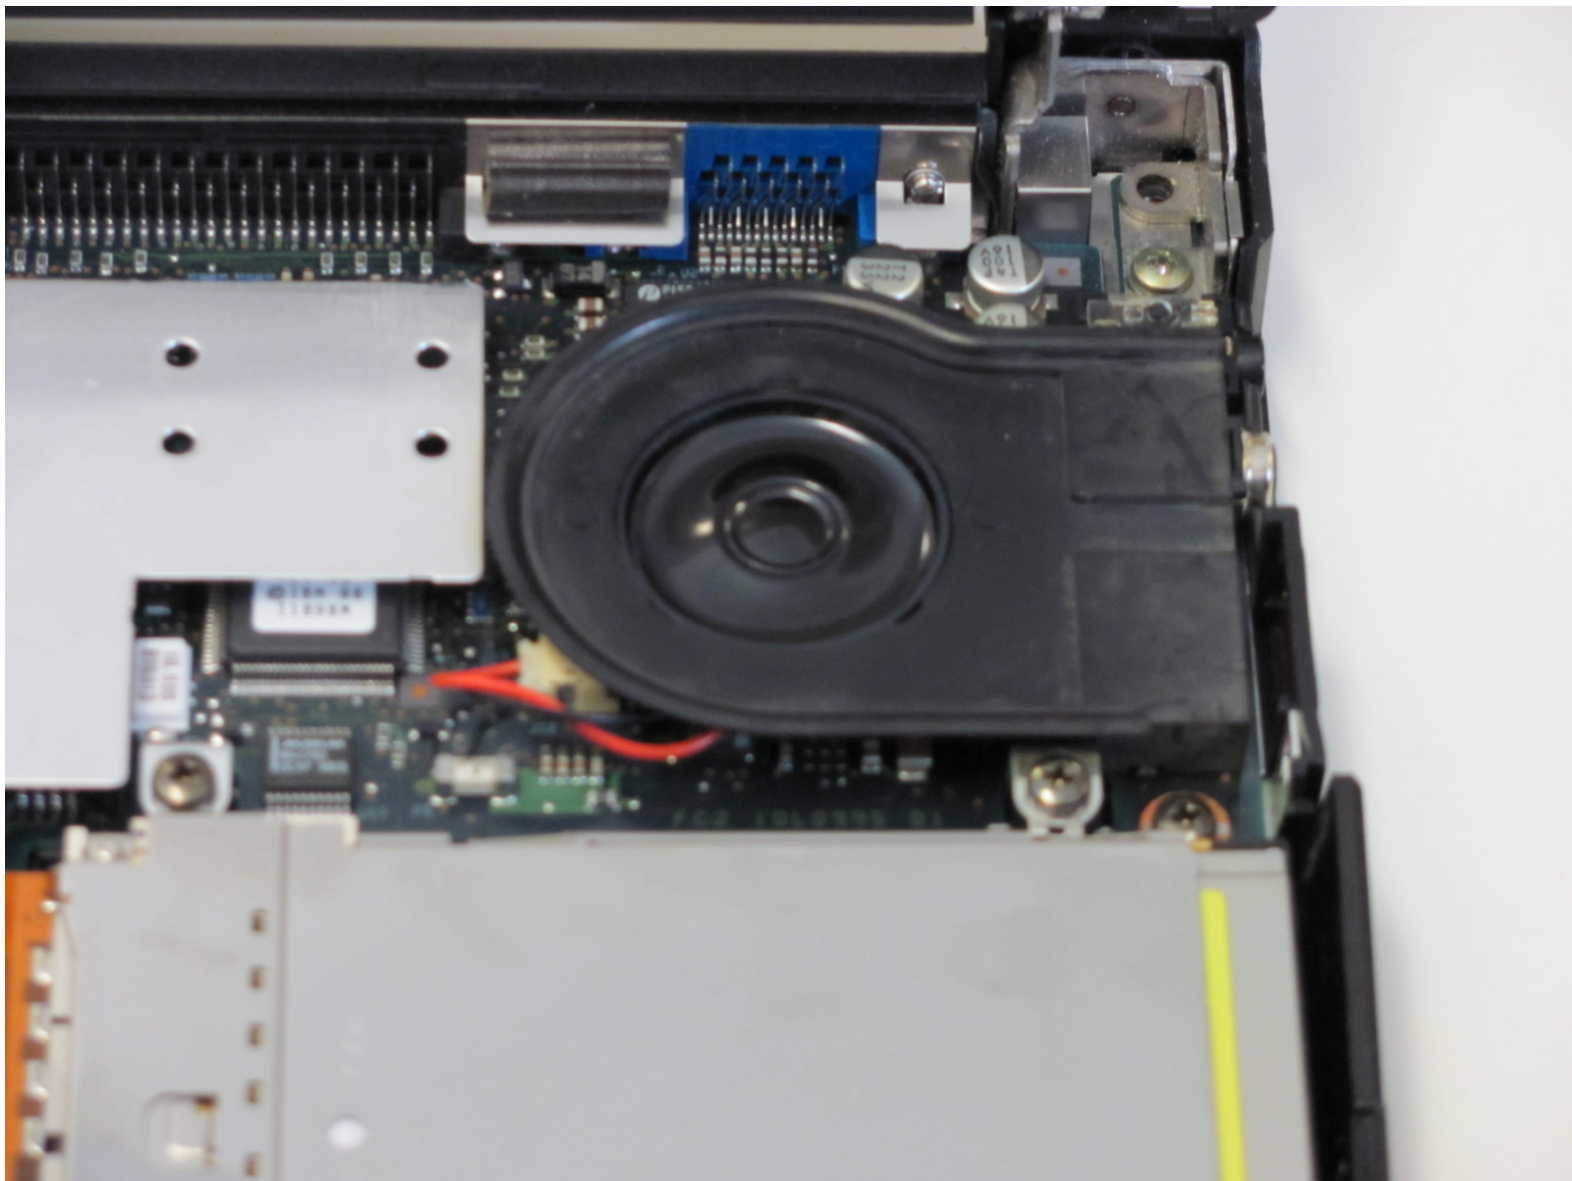

## INTRODUCTION

How to replace the speaker.

---



### TOOLS:

- [Flathead Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



- Slide the battery release latch to the right.
- Pull out the battery.

## Step 2 — Upper Case



- Remove the 7 mm Philip screws.
- Remove the 10 mm Philip screws.
- Remove the 14 mm Philip screw.

## Step 3



- Open the flap on the left hand side.

## Step 4



- Insert the iPod opening tools between the right and left sides of the latch.
- Pry the right side of the latch, and then pry the left side to detach the laptop's cover.



## Step 5




- Open the flap on the right side.

## Step 6



- Insert the iPod opening tools towards the right side of the latch.
- Gently pry the right side out to release the top cover.


## Step 7

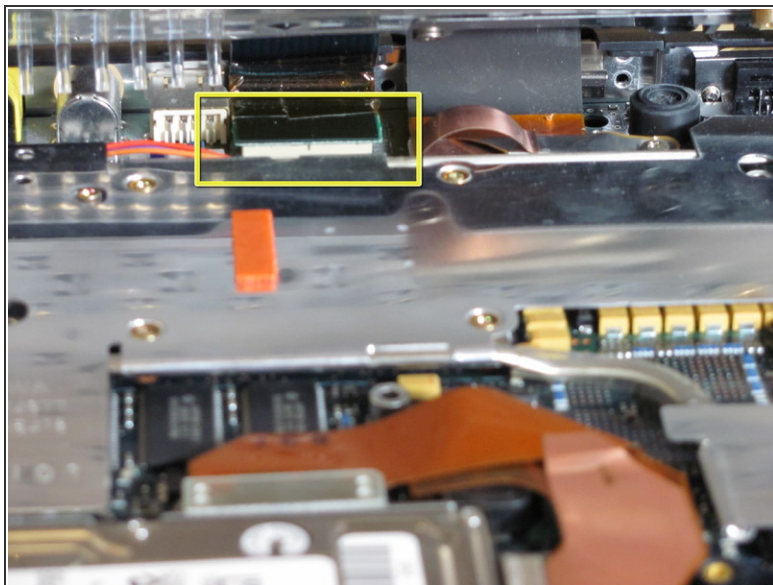

- Lift the keyboard slowly.

⚠ A cable connects the keyboard to the motherboard. If you are not careful, you will damage the cable.

## Step 8

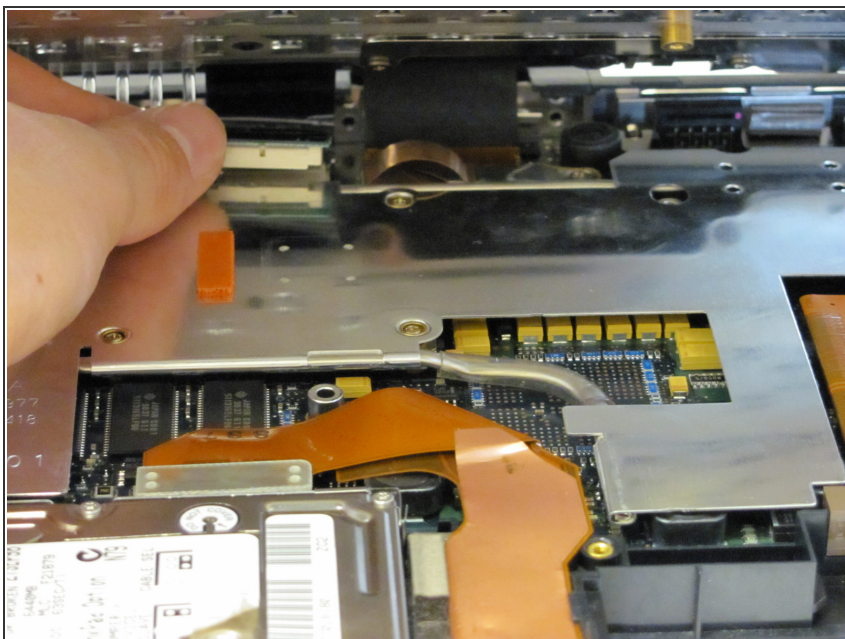

- Use your fingers or a spudger to detach the connector.




## Step 9




- Carefully lift and remove the keyboard.



## Step 10 — Speaker

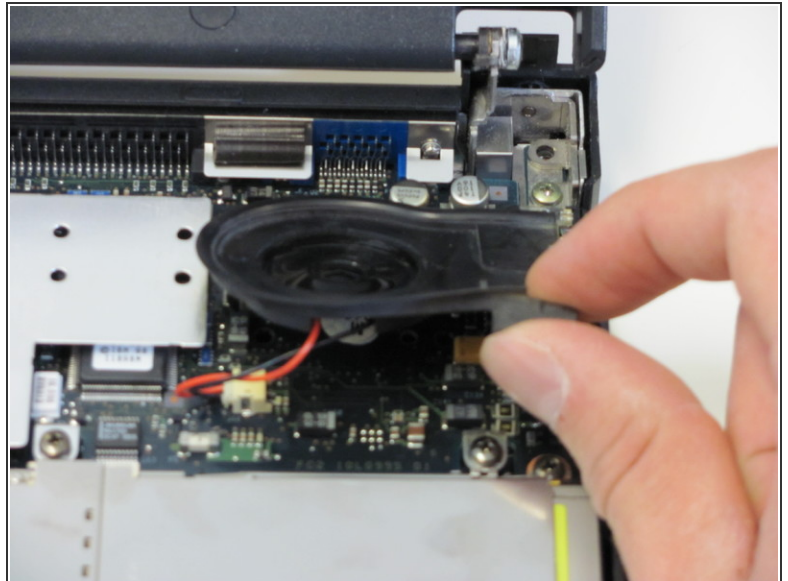

- Slowly and carefully lift the speaker with your fingers.

 The port that the speaker plugs into can be easily removed from the motherboard if not careful!  
Unplug the speaker with extreme caution!

## Step 11

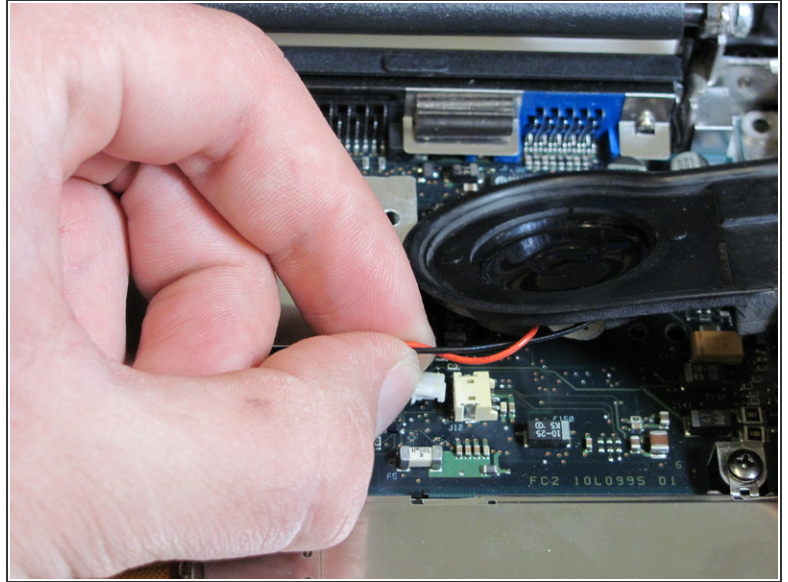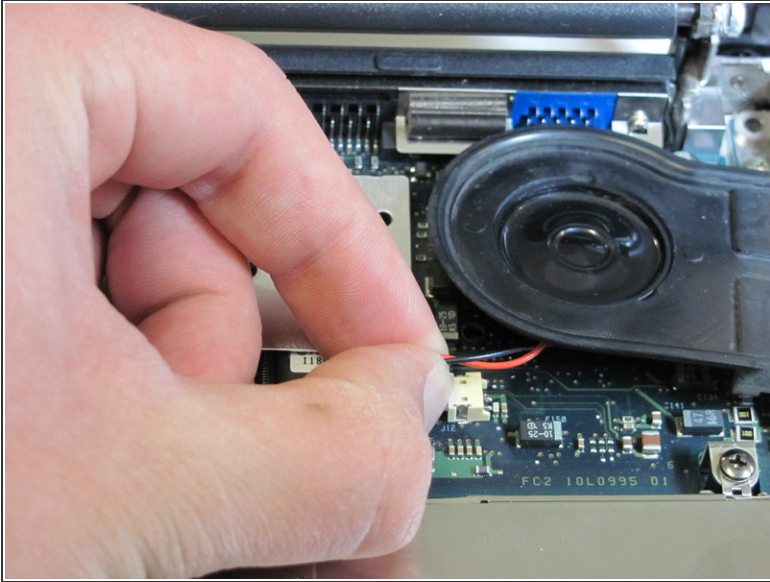

- Use your fingers to unplug the wires from the connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-30 11:45:12 AM.